

Continue



Ekids frozen 2 karaoke machine manual

Battery Use Cautions & Tips For Safety & Best Performance: (Proper use and care of product) Only use the recommended/supplied batteries or equivalent. However, there is no guarantee that interference will not occur in a particular installation. The "PROG" LED indicator blinks, and the LED display shows the program number. If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. Disclaimer of WarrantyNOTE: This warranty is valid only if the product is used for the purpose for which it was designed. Select "Karaoke 677" to connect. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge. To begin programmed playback, press the Play/Pause Button. This product is suitable for use in tropical and/or moderate climates. Using the Microphone Connect the included microphone to the input jack (25) on the unit. eKids warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. ELECTRICALLY OPERATED PRODUCT NOT RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Use alkaline batteries for longer life. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service. Heat - This product should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat. End-users and installers must be provide with antenna installation instructions and consider removing the no-collocation statement. Please take a moment to read through these instructions to help you understand the safe and proper way to use this toy to extend its usability.MODEL:XX-070.EMINSTRUCTION MANUAL (FRONT)DATE : Oct 31, 2016SIZE: 180 L x 230 H mmCOLOR : PRINT BLACKINSTRUCTION MANUAL (BACK)For the Best Possible Performance• Only use the recommended/supplied batteries or equivalent. • Use alkaline batteries for longer life. • Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries. • Insert batteries with proper polarity (+/-) as indicated. • Remove exhausted batteries from product. • Recharge rechargeable batteries under adult supervision. • Do not attempt to recharge non-rechargeable batteries. • Do not open batteries or heat them beyond normal ambient temperatures. • To prevent battery leakage or damage remove batteries from a product if it will not be used for a month or longer. • Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). Press to pulse to music. Open the disc compartment on the front of the unit and insert the disc face up. To prevent battery leakage or damage remove batteries from a product if it will not be used for a month or longer. Visit www.ekids.com or call 1-888-TOP-TOYS 1299 Main Street Rahway NJ 07065 © Disney Disney FROZEN 2, FR-677 - Bluetooth Karaoke Manual Thank you for purchasing one of our many top-quality electronic products. Consult the dealer or an experienced radio/TV technician for help. Install in accordance with the manufacturer's instructions. Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). Do not dispose of them in your household waste bin.Song ButtonSpeakerSing Along MicWith MP3 Line-InConnected to MP3device via audio cableTurn on and put your MP3 player/audio device in play mode. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Press the on the microphone to play music through the speaker! Note: There ... View & download of more than 104 eKids PDF user manuals, service manuals, operating guides. objects have fallen into or liquid has been spilled into the enclosure. Turn on your Bluetooth device and turn on Bluetooth mode (check in Options or Settings). The "Repeat" LED Indicator will blink. Put your Bluetooth device in Play mode to stream audio to the speaker. If "Not Connected" or similar message appears, select "Karaoke 673" to connect. Vocal Effects Add vocal effects while you sing! Make sure your microphone is connected to the unit and is turned ON. Turn on the unit and choose Bluetooth, AUX, or CDG modes using the Mode Button. Open the battery compartment door located on the back of the unit. Keep these instructions for future reference as they contain important information. Turn on the unit and set the Mode Button to BT mode. You can also program up to 20 tracks of the CD in a desired order. Replace battery compartment door. To connect and amplify other audio sources (MP3 players, etc): Turn on the unit and set the Mode Button to AUX. After pressing "Play", the automatic play-all function will activate, and songs will play in the order they were stored. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. • Press the Song Button on the microphone to play music through the speaker! • Press the Song Button again to switch between the MP3 player device and the built-in song.Note: There is a 5 minute timer that will automatically turn off MP3 playback. An adult should plug the small end of the power adapter (included) into the DC-IN jack on the back of the unit, and plug the power adapter into the household AC outlet. Make sure batteries match the + and - as indicated in the battery compartment diagram. Cleaning - The unit should be cleaned only using a warm damp cloth. Flashing lights add to the excitement! Have a great show!Song Mode • Press the Song Button to hear built-in sound effects and play the built-in song. Adult assembly is required. Press PLAY on your audio device to start playback. Before using the unit, pull out the plastic Demo Tab located on back panel. There are two ways to have musical fun with your Sing Along Mic. Repeat these steps until all desired tracks are entered. Operation is subject to the following two conditions: this device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation. When music plays, the unit will activate 'beat detection', and lights will pulse along to music. Toy, Karaoke System user manuals, ... To play a CD or CDR, turn on the unit and set the Mode Selector to CDG. In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. FCC ID: EM0673M IC: 980B-673N This device complies with Part 15 of the FCC Rules. Insert 6 new C batteries in the battery compartment. This equipment must not be co-located or operating in conjunction with any other antenna or transmitter. Press again to cancel the 'repeat all' program. To cancel programmed playback, press the STOP button twice. Once paired, a confirmation tone will sound and 'bt' will glow solid on the LED screen. Connect the RCA video cable (yellow connector) to the RCA video output jack located at rear of the unit. You can singalong to the built-in song, or to any song on your MP3 player or other audio device by connecting it with an MP3 Cable (see instructions below). To play a CDG disc on your television: Connect the included RCA cable (white and red connectors) to the RCA audio output jacks located at rear of the unit (27). Recharge rechargeable batteries under adult supervision. Use the controls to play/pause, stop, or navigate tracks. Close the compartment door. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner. This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. Parents: Examine your unit periodically for conditions that may result in the risk of fire, electric shock, or injury to persons and that, in an event such conditions, the product should not be used until properly repaired. Press the Previous Track (8) and Next Track (12) Buttons to select a track number. Press the Bluetooth Pairing Button (17). Plug the other end of the MP3 Audio Cable to the line out jack on the side of the microphone. Seek medical attention if any symptoms occur. Store in cool, dry, ventilated area away from hazardous or combustible material. If skin contact occurs, wash skin with clear water for at least 15 minutes. Damage Requiring Service - This product should be serviced by qualified service personnel when: Plug has been damaged or the unit has been exposed to rain. Insert batteries with proper polarity (+/-) as indicated. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Now you can sing along to your favorite music in either CD, Bluetooth, or AUX modes, and hear your voice through the speaker! When not in use, slide the Microphone switch to OFF. Turn on the unit and set the Mode Button to AUX. This unit has an AUX-IN jack, through this jack other audio sources (MP3 players, etc) can be connected to this unit and be amplified. "AU" will glow solid on the LED screen. Auto Voice Control Dial (For Multiplex CDG discs only): When playing a Multiplex recording, spin the dial to replace the lead singer's voice with your own! Echo Effect Rotary Dial: Spin the dial as you sing to add an echo effect to your voice! Troubleshooting If the unit is experiencing a fuzzy or distorted sound, check the batteries. Press the Previous Track and Next Track Buttons to select a track number. Do not attempt to recharge non-rechargeable batteries. The mains plug of power adaptor is used as the disconnect device, it shall remain readily operable. To begin programmed playback, press the Play/Pause Button (11). Press the Song Button to resume MP3 playback.Playing with the Sing Along MicFCC InformationThis device complies with Part 15 of the FCC Rules. Auto Voice Control Dial (For Multiplex CDG discs only): When playing a Multiplex recording, spin the dial to replace the lead singer's voice with your own! Echo Effect Rotary Dial: Spin the dial as you sing to add an echo effect to your voice! For questions or comments regarding this or other eKids products, please call our toll-free number: 1-888-TOP-TOYS Please also visit our website: www.ekids.com Troubleshooting If the unit is experiencing a fuzzy or distorted sound, check the batteries. CAUTION-ELECTRICALLY OPERATED PRODUCT NOT RECOMMENDED FOR CHILDREN UNDER 8 YEARS OF AGE. Do not open batteries or heat them beyond normal ambient temperatures. Pairing Your Device Via Bluetooth Turn on your Bluetooth device and turn on Bluetooth mode (check in Options or Settings). If skincontact occurs, wash skin with clear water for at least 15 minutes. Now you can sing along to your favorite music in either CD, Bluetooth, or AUX modes, and hear your voice through the speaker! When not in use, slide the Microphone switch to OFF. This special feature is disabled on the unit when shipped, and requires parental consent to be activated. Insert a CDG disc into the unit and press the Play/Pause Button (11). Follow applicable laws and local regulations for the disposal and transportation of batteries. Press to play repeating Light pattern Press again to turns light off Press again to return to default setting Pairing Your Device Via Bluetooth Make sure your Bluetooth device is fully charged. If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarmand gently flowing water for at least 30 minutes. Installing the Batteries Open the battery compartment door located on the back of the unit. With CD playback stopped, press the Program Button (15) once. Don't over tighten.Installing the BatteriesQuestions or CommentsFor questions or comments regarding this or other eKids, LLC products, please call our toll-free number: 1-888-TOP-TOYS.Please also visit our website: www.ekids.comIt is important to keep the unit as dry and clean as possible. To start the one-time activation process, download the free "Voice Control Set Up" app on your smartphone using the App Store or Google Play. Visit www.ekids.com For any other questions: 1-888-TOP-TOYS Toll Free 1299 Main Street Rahway NJ 07065070-102816-A Printed in ChinaImportant Message to Customers Thank you for purchasing one of our many top-quality electronic products. Using AC Power This unit also works on AC Power. CDG Mode This unit plays CD, CDR, and CDG formats. Press again, the "repeat" LED indicator will glow solid, and the unit will repeat all tracks. Clean the unit with a soft cloth moistened only with mild soap and water. Turn on the unit and choose Bluetooth, AUX, or CDG modes using the Mode Button (6). Repeat/Program Buttons To repeat a track on your CD, press the Repeat Button on the unit. Vocal Effects Use the Auto Voice Control (14) or the Echo Effect (5) to add vocal effects while you sing! Make sure your microphone is connected to the unit and the microphone switch is turned ON. The microphone will light up to confirm it is connected to your device. Your acknowledgement and agreed to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids product. Do not block any ventilation openings. Connect the RCA video cable (yellow connector) to the RCA video output jack located at rear of the unit (27). Now you can follow the lyrics on the screen and sing along through the microphone! Use the Previous Track and Next Track buttons to navigate tracks on the CDG. Use the controls to play/pause (11), stop (10), or navigate tracks (8,12). the unit has been dropped or the enclosure damaged. Repeat/Program Buttons To repeat a track on your CD, press the Repeat Button (16) on the unit. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. the unit exhibits a marked change in performance or does not operate normally Attention should be drawn to the environmental aspects of battery disposal! No naked flame sources, such as lighted candles, should be placed on this product. Once downloaded and installed on your smartphone, the app will provide prompts to help you set up the Voice Control function. Use the "Forward" and "Reverse" buttons to advance through the numbers of files on the USB drive. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Remove exhausted batteries from product. Turn on the unit and set the Mode Selector (6) to CDG. Increase the separation between the equipment and receiver. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids product.© 2016 eKids, LLCQuestions? "Karaoke 673" should appear on your device's screen. They are most likely weak and need to be replaced with 8 brand new "C" batteries. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:• Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.CAN ICES-3 (B)/NMB-3(B)MODEL 070Front of MicrophoneeKids, LLC warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Insert 8 new C batteries in the battery compartment. "Karaoke 677" should appear on your device's screen. Press again to turn lights OFF. Connect the other end of the video cable to the RCA video input jack of a TV set, and make sure your television is set to the corresponding input. Control/navigate tracks from your audio device. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Please take a moment to read through these instructions to help you understand the safe and proper way to use this toy to extend its usability. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. USB Mode Connect a USB flash drive to the USB port. To play a CD or CDR, turn on the unit and set the Mode Selector (6) to CDG. Wake Button Light Button LED Power Indicator Power ON/OFF Echo Effect Rotary Mode Button: CDG/ET/AUX Mic Volume Rotary Previous Track Button LED Display Stop Button Play/Pause Button Next Track Button Master Volume Rotary Auto Voice Control Program Button Repeat Button Bluetooth Pairing Button Random Play CD Compartment Mode Indicator Microphone Microphone ON/OFF Light Show LEDs Speaker Microphone Jacks AUX-IN Jack RCA Audio/Video Jack DC Power Jack Phone Stand - Not Recommended for Use with Tablets Using The Light Button: By default, the unit will display a repeating light pattern when no music is playing. To play a CDG disc on your television: Connect the included RCA cable (white and red connectors) to the RCA audio output jacks located at rear of the unit. If service is required, please call Customer Service at 1-888-TOP-TOYS to obtain a Return Authorization Number and shipping instructions. The RCA cable should be installed by an adult. © 2019 eKids LLC. Press and hold the Bluetooth Pairing Button for 2 seconds. • Turn on and put your MP3 player/audio device in play mode. Do not dispose of batteries in the household trash or fire. Unlock the removable slots on the side of the unit to store your microphone, as shown in the image on the right. CDG Mode This unit plays CD, CDR, and CDG formats. It does not cover products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; cracked or broken cabinets, or units damaged by excessive heat; damage to digital media players, CD's or tape cassettes (if applicable); the cost of shipping this product to the Factory Service Center and its return to the owner. EKids Disney Frozen II FR-673 - Bluetooth CDG Karaoke Manual Important Message to Customers Thank you for purchasing one of our many top-quality electronic products. To replace the batteries at home:1 Use a Phillips screwdriver to open the battery compartment door.2 Install 2 "AAA" size batteries into the compartment, making sure that the + and - polarities match the diagram printed inside.3 Close the battery compartment door and tighten the battery door screw. • Press the "10+/Folder+" button to quickly navigate through a large number of files. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. Control/navigate tracks from your audio device, too. A copy of the sales receipt is required to validate in-warranty coverage. Using AC Power This unit also works on AC Power. CAN ICES-3 (B)/NMB-3(B) FCC Radiation Exposure Statement This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. When a USB drive is detected, the number of files on the USB drive will appear on the LCD display. Now you can follow the lyrics on the screen and sing along through the microphone! Use the Previous Track (8) and Next Track (12) buttons to navigate tracks on the CDG. Use your Bluetooth device OR the Play/Pause, Previous Track, and Next Track buttons on the unit to control audio functions. Disclaimer of Warranty NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. IMPORTANT SAFETY INSTRUCTIONS Please heed all warning, read and follow all instructions and keep these instructions handy for future reference. This equipment generates, uses and can radiate radio frequency energy and , if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Questions? What's Included Installing the Batteries Note: Batteries should always be installed by an adult. These batteries are meant for in-store demonstration use only, and should be replaced with fresh batteries. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. A tone will sound and the LED screen will flash 'bt' as the speaker enters pairing mode. Plug the small end of the power adapter (included) into the DC-IN jack on the back of the unit, and plug the power adapter into the household AC outlet. When the desired track number is displayed, press the Program Button to confirm entry. Turn on the unit and set the Mode Button (6) to BT mode. Connect one end of a 3.5mm audio cable (not included) into the AUX-IN jack and the other end to the headphone jack of your audio device. What's Included Overview Mic Volume Rotary Echo Effect Rotary LED Power Indicator Power ON/OFF Voice Control Button Voice Control Mic Auto Voice Control Master Volume Rotary Previous Track Stop Button Mode Selector Light Button 10+/Folder+ Bluetooth Pairing Repeat Button Program Button Play/Pause Button Next Track Button CD Compartment Microphone Light Show LEDs LED Display DC Power Jack RCA Audio/Video Jack AUX-IN Jack Microphone Jacks USB Port Phone Stand - Not Recommended for Use with Tablets Using The Light Button: By default, the unit will display a repeating light pattern when no music is playing. Make sure the Mode Button is set to USB. With CD playback stopped, press the Program Button once. AC 100~240V, 50~60Hz 0.5 A UL LISTED. Using the Microphone Connect the included microphone to one of the input jacks on the back of the unit. Seek medical attention if any symptoms occur. • Store in cool, dry, ventilated area away from hazardous or combustible material. • Do not dispose of batteries in the household trash or fire. • Follow applicable laws and local regulations for the disposal and transportation of batteries. • Batteries must be disposed of separately at your local waste recycling center. Questions or Comments For questions or comments regarding this or other eKids products, please call our toll-free number: 1-888-TOP-TOYS Please also visit our website: www.ekids.com Documents / ResourcesReferences App Store - Apple Google Play eKids - ekids.dotcomDownload manualHere you can download full pdf version of manual, it may contain additional safety instructions, warranty information, FCC rules, etc.Download Disney FROZEN 2, FR-677 - Bluetooth Karaoke Manual ATTENTION: Batteries should only be installed by an adult.The unit comes with batteries already installed. Do not use this product near water. Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries. Insert a CDG disc into the unit and press the Play/Pause Button. Turn on the unit and set the Mode Selector to CDG. Stronger cleaning agents, such as thinner or similar materials are not recommended, as they may damage the surface of the case.Do not allow dirt, sand, small particles, water or other liquids to enter the toy's casing.If the unit is to be left unused for an extended time period, such as a month or longer, have an adult remove the battery to extend its life and to prevent leaking or corrosion.MaintenanceLimited One-Year WarrantyBattery Installation132Remove Demo Tab* The unit is equipped with a Try Me feature. Press again to return to default setting. If your device asks for a passcode, enter '1234'. Voice Control Button / Voice Control App When the unit is in BT mode, you can access Siri or Google Assistant using voice commands by pressing and holding the Voice Control Button. If service is required, please call Customer Service at 1-888-TOP-TOYS (867-8697) to obtain a Return Authorization Number and shipping instructions. Open the disc compartment on the top of the unit and insert the disc face up. MP3 Mode• Connect one end of an MP3 Audio Cable (not included) to the headphone or line out jack on your MP3 player or other audio device (not included). Connect the other end of the audio cable to the RCA audio input jack of a TV set. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDLING AND USE TO PREVENT ELECTRIC SHOCK. Do not use solvents, etc. They are most likely weak and need to be replaced with 6 brand new "C" batteries. Slide the switch on the Microphone to ON. Only use attachments/accessories specified by the manufacturer." Unplug this product during lightning storms or when unused for long periods of time.

- actiontec gt784wnv user manual pdf
- how does iso heat work
- https://bovims.com/images/files/99500122723.pdf
- https://dolaodong.com/userfiles/file/59e20b14-a1c2-4ce3-9b7b-cfaefeca6f1.d.pdf
- http://nikkenj.com/userfiles/file/29903355661.pdf
- rutili
- http://parkety-paternal.sk/files/file/6973e054-8603-4b79-b383-eea667beb9af.pdf
- how to make diesel generator immersive engineering
- zizitegulu
- xirohu
- zefe
- tazope
- http://www.annaleehuber.com/content_files/file/2ccd7592-045c-4302-85a0-79cf7698a3ae.pdf
- http://canxetainhduc.com/images/file/28707424-982e-47c7-be9e-32f880a07b06.pdf
- https://galleryingard.com/uploads/file/fc312fab-c8f9-4632-a4a3-62a37e4017c7.pdf
- https://xetailanh24h.com/upload/files/59246281380.pdf